


Training Level Adjustment Instructions

For Use During GentleSteps™ Training Week One

Pet Stop OT-300 Transmitter

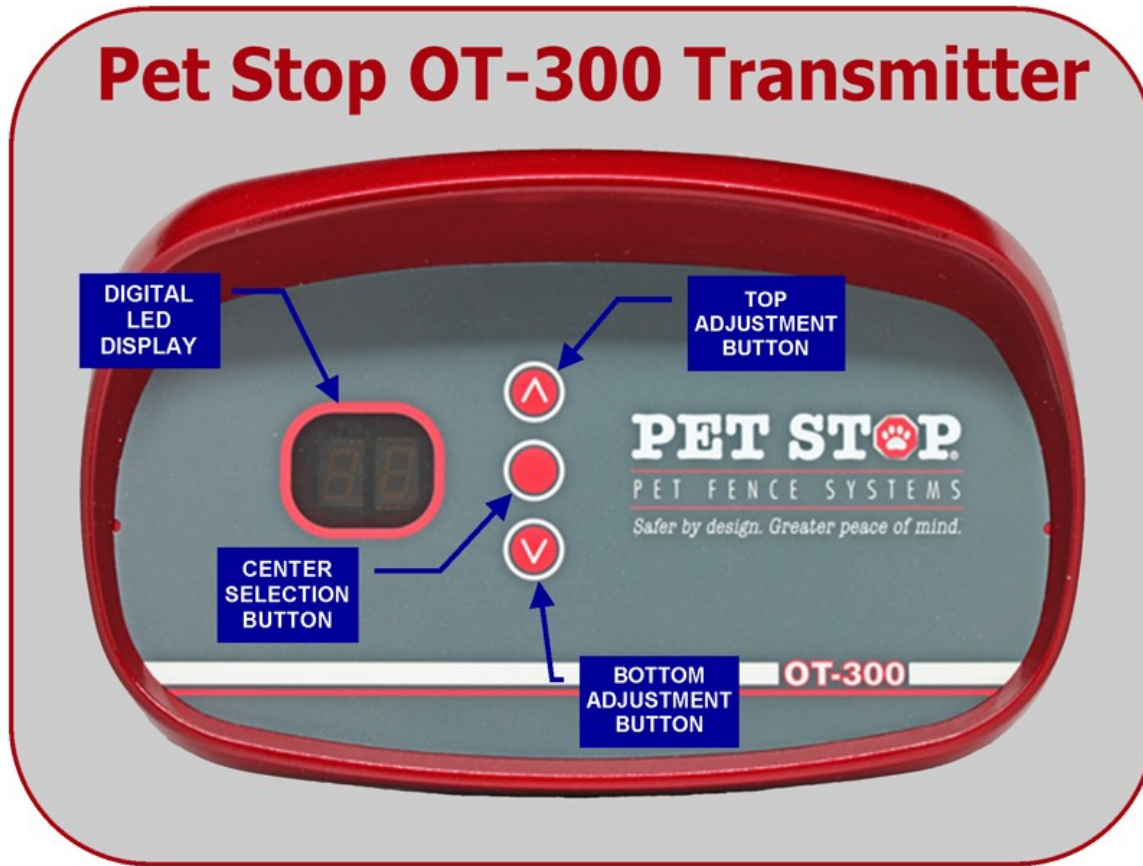

STEP ONE

Press and Hold the **CENTER SELECTION BUTTON** for a couple of seconds, till the **DIGITAL LED DISPLAY** begins to flash '98'. The transmitter is now in Programming Mode.

STEP TWO

Bring the Receiver you want to program near the center of the circuit board, 2-6 inches in front of the Transmitter. When in range, the receiver's red LED will light. When it does, hold it in place for the next step.



STEP THREE

While the receiver's light is on, Press the **TOP** or **BOTTOM ADJUSTMENT BUTTON** to advance or decrease the Training Level. The receiver will beep twice, then flash the number of times corresponding to the new level*. Press the Center Selection Button to save.

You can only advance or decrease the setting one level at a time. After making an adjustment the display will stop blinking for 2 seconds and then begin to blink again. Once the display begins to blink another adjustment can be made.

ALABAMA
PET STOP

PET FENCE SYSTEMS

The Pet Fence Experts™ Since 1994

www.PetStopAlabama.com

205.982.5196
888.740.3644

* For example: If Training Level 5 is selected, the receiver's LED will blink 5 times.

IMPORTANT: The Digital LED Display indicates the system's Signal Output Level. **IT DOES NOT INDICATE CORRECTION LEVEL.** Following Training Level Adjustments, the Digital LED Readout will not change. Remember to use treats generously during GentleSteps Training. If you have questions or need help programming the Training Levels, please contact us for assistance.